



Sentinel Heater Installation Guide (Non-ADA)

Triple E Technologies, LLC

Version 052716.01

Triple E Technologies, LLC
P.O. Box 2677 Post Falls, ID 83877
Phone: 208.777.9300 | Fax: 208.777.9304

© 2016 Triple E Technologies, LLC

All rights reserved. No parts of the content of this work may be reproduced or transmitted in any form without the written permission of Triple E Technologies, LLC.

The information in this document is subject to change without notice. Although Triple E Technologies, LLC has attempted to ensure the accuracy of the contents of this document, this document may include errors or omissions. The examples and sample programs are for illustration only and may not be suited to your purpose. You should verify the applicability of any example or sample program before placing the software into productive use. The examples in this document may not exactly replicate your system configuration, but the functions will remain the same.

The Triple E Technologies, LLC logo and OneTouch DataManager are registered trademarks of Triple E Technologies, LLC. All other brand names and trademarks associated with Triple E Technologies, LLC products and services are trademarks of Triple E Technologies, LLC. All other brand names and trademarks in this document are the property of their respective owners.

Comments, questions, or concerns? Please email all inquiries to helpdesk@e3tek.com

Table of Contents

Overview	1
Supplied Components	1
Additional Required Components	1
Hardware Identification	1
Installation	2

Overview

This guide details the procedures for installing a non-ADA Sentinel heater element.


Supplied Components

1. Heater element
2. Power cord
3. Thermostat

Additional Required Components

1. Power drill
2. Nuts and bolts
3. Washers
4. Adhesive tape

Hardware Identification

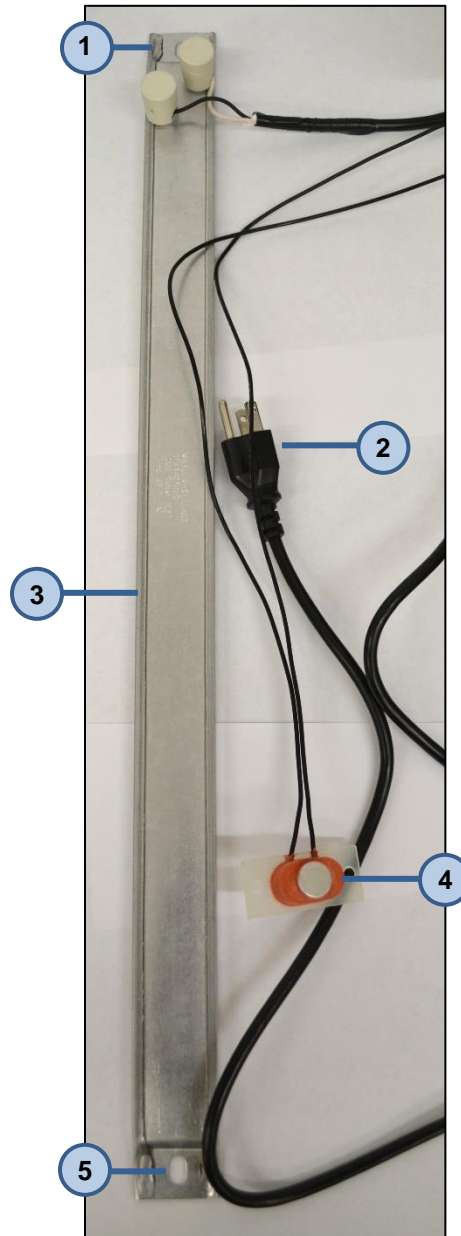

1. Mounting hole
2. Power cord
3. Heater element
4. Thermostat
5. Mounting hole



WARNING: The heater element can get extremely hot. Avoid direct contact when the element is powered on. Damage may occur from direct contact with wires or other devices in the Sentinel.

Installation

1. Measure two inches above interior Sentinel floor and mark each mounting hole.



2. Drill a hole through each pencil mark.



3. Use bolts and washers to attach heater element.



4. Use adhesive tape to mount thermostat on cabinet wall opposite the heater element. Place thermostat 6" – 12" higher than heater element.



5. Connect power cord into AC outlet.

